


OWNER'S MANUAL

KOALA B-AIR BLOWER

MODEL # KP-280/KP-680/KP-1200

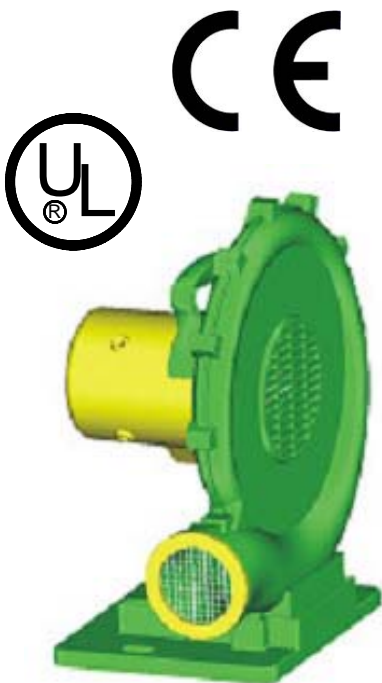

- INTRODUCTION
- OPERATION
- SAFETY
- SERVICE
- WARRANTY
- CONTACT
- SPECIFICATIONS
- TROUBLESHOOTING

INTRODUCTION TO B-AIR

YOUR NEW B-AIR KOALA BLOWER HAS A HIGH EFFICIENCY MOTOR, WHICH HAS STATE OF THE ART CONSTRUCTION AND SCREENS ON OPEN VENTS FOR SAFETY AND LONG LIFE. THE HANDLES ARE DESIGNED FOR EASY CARRYING. A BASE PLATE IS ENCLOSED TO “SNAP” ON BOTTOM OF BLOWER TO INSURE STABILITY.

OPERATION/USE

THIS HIGH PRESSURE UNIT IS INTENDED TO INFLATE VARIOUS INFLATABLE PLAY STRUCTURES, BUT IS SUITABLE FOR A VARIETY OF OTHER APPLICATIONS.

- A) CAREFULLY PLACE THE B-AIR UNIT ON STABLE FLAT DRY SURFACE-KEEPING CHILDREN AWAY.
- B) REMOVE THE BASE PLATE FROM BOX AND PLACE IT ON A FLAT STABLE SURFACE, WITH PRONGS FACING UPWARD. (SEE DIAGRAM “A”).
- C) CAREFULLY “SNAP” BLOWER INTO THE BASE PLATE ON A FLAT STABLE SURFACE. MAKE SURE ALL 4 CORNERS ARE SECURELY SNAPPED INTO PLACE (SEE DIAGRAM “B”).
- D) ATTACH AN INFLATABLE TUBE AROUND THE EXHAUST OPENING USING STRAPS OR ANY OTHER FORM OF TIGHTENER.
- E) PLUG CORD INTO A GROUNDED G.F.C.I. OUTLET ONLY.
- F) TURN ON SWITCH AND MAKE SURE IT IS OPERATING CORRECTLY.
- G) ALL BLOWERS IN OPERATION MUST BE SUPERVISED AT ALL TIMES.

STORAGE

STORE UNIT INDOORS IN A CLEAN DRY ENVIRONMENT TO ENSURE LONG LIFE

SAFETY

- 1) BLOWER MUST HAVE BACK PRESSURE, MEANING IT MUST BE ATTACHED TO AN INFLATABLE OR DUCT TO AVOID ANY DAMAGE TO MOTOR.
- 2) KEEP CHILDREN AWAY FROM UNIT AT ALL TIMES WHILE IN OPERATION AND/OR PLUGGED IN.
- 3) DO NOT PUT FINGERS OR OTHER OBJECTS IN UNIT WHILE IN OPERATION AND/OR PLUGGED IN.
- 4) DO NOT OPERATE IN POOLED WATER TO AVOID ELECTRIC SHOCK.
- 5) MOTOR MUST BE KEPT DRY AT ALL TIMES. IF UNIT BECOMES WET, THOROUGHLY DRY BEFORE NEXT OPERATION.
- 6) INDOOR USE: USE ONLY WITH A GROUNDED PLUG AND/OR EXTENSION CORD TO AVOID RISK OF ELECTRICAL SHOCK OR FIRE. REMEMBER NEVER TO USE A CORD WITH ANY KIND OF DAMAGE OR WEAR.
- 7) MAKE SURE THE POWER SOURCE IS SUFFICIENT TO MEET THE REQUIREMENTS OF THE BLOWER.
- 8) KEEP AIR INTAKES CLEAR AT ALL TIMES TO AVOID CLOGGING OR BLOCKING IN ORDER TO PREVENT OVERHEATING THE UNIT. BLOCKING THE AIR INTAKES COULD RESULT IN A FIRE OR ELECTRICAL HAZARDS.
- 9) DO NOT REMOVE ANY SCREENS OR SAFETY GUARDS FROM THIS UNIT TO PREVENT INJURY TO PERSONS, AND TO AVOID OBJECTS FROM COMING IN CONTACT WITH THE BLOWER WHEEL. UNIT DAMAGE IN THIS MANNER WILL VOID YOUR WARRANTY.
- 10) DO NOT OPERATE UNIT CLOSE TO ANY DANGEROUS AREAS, SUCH AS EXPLOSIVE GASES, FLAMMABLES, HEATERS AND VENTILATED ENVIRONMENTS, WHICH MAY RESULT IN EXPLOSIONS OR ELECTRICAL HAZARDS.
- 11) DO NOT USE ANY FORM OF SPEED CONTROL DEVICE AS DOING SO MAY RISK INJURY OR FIRE.
- 12) ALWAYS PLACE BLOWER ON A SMOOTH AND LEVELED SURFACE FOR SAFE OPERATION.
- 13) DO NOT OPERATE IN STACKED POSITION.
- 14) DO NOT USE UNIT IF DAMAGED.
- 15) BEFORE CLEANING OR SERVICING UNPLUG UNIT.
- 16) ALL BLOWERS IN OPERATION MUST BE SUPERVISED AT ALL TIMES.

WARRANTY

6 MONTHS: From Original Purchase date will cover all parts(except Cords), labor and one-way shipping costs to your location in the 48 Contiguous states, using UPS Ground Service. Customer will pay shipping to our warehouse. Canada and Non-Contiguous States must pay for freight both ways.

SERVICE

IN ORDER TO RECEIVE SERVICE OR REPLACEMENT PARTS UNDER WARRANTY, YOU MUST:

- A) CALL FOR A RMA# (Return Merchandise Authorization Number)
- B) HAVE PROOF OF PURCHASE
- C) SHIP TO: B-AIR BLOWERS
 - IF IMMEDIATE SERVICE IS REQUIRED, B-AIR WILL SHIP A REFURBISHED BLOWER IMMEDIATELY TO REPLACE THE ONE REQUIRING SERVICE IF A CREDIT CARD IS PROVIDED AND CHARGED. ONCE WE RECEIVE YOUR BLOWER, WE WILL CREDIT YOUR CREDIT CARD ACCOUNT.
 - WE WILL GLADLY REPAIR YOUR BLOWER AND SHIP WITHIN 24 HOURS

UPON INSPECTION, WE WILL CALL WITH THE STATUS OF YOUR ORDER AND WILL ISSUE REPAIR OR REPLACEMENT PARTS DEPENDING ON WARRANTY CRITERIA.

CORDS

- 1) DO NOT USE EXTENSION CORDS FOR OUTSIDE USE.
- 2) USE 3 PRONG ADAPTORS THAT ARE UL APPROVED AND NOT LESS THAN 14-3 WITH GROUND FAULT CIRCUIT INTERRUPTER (G.F.C.I.).
- 3) DO NOT USE CORDS THAT SHOW ANY KIND OF WEAR OR DAMAGE.
- 4) CORDS ARE NOT COVERED BY WARRANTY.

B-AIR BLOWERS LIMITED WARRANTY

COVERS:

B-AIR BLOWERS ARE COVERED AGAINST DEFECTS IN MATERIAL AND CRAFTSMANSHIP USED UNDER NORMAL INTENDED USE TO ORIGINAL PURCHASER FOR A TERM OF 6 MONTHS FROM THE ORIGINAL DATE OF PURCHASE.

DOES NOT COVER:

ANY SIGNS OF MISUSE INCLUDING; BUT NOT LIMITED TO ROUGH HANDLING, ABUSE, TAMPERING, IMPROPER VOLTAGE USE, UNAUTHORIZED MAINTENANCE AND REPAIRS.

WARNING

ALL BLOWERS IN OPERATION MUST BE SUPERVISED AND ATTENDED AT ALL TIMES.
THE USE OF A 3-PRONG TO 2-PRONG ADAPTER IS PROHIBITED.

CONTACT

INTERTEX, INC
1851 TYBURN STREET
GLENDALE, CA 91204
1-877-800-2247(BAIR)
FAX:(818) 242-2430
EMAIL:INFO@INTERTEXINC.COM
WEB SITE: www.b-air.com

SPECIFICATIONS

MODEL: KP-280/680/1200

	KP280	KP680	KP1200
115 VOLT			
MOTOR POWER	280W	680W	1200W
AMPS	2A	4.5A	6A
MAX STATIC PRESSURE	5	6.25	7.25 INCH
WEIGHT NET	8 LBS	13 LBS	18 LBS
UNIT SIZE (LxWxH)	14.2x14.2x11	16.2x16.2x11.5	17.4x17.4x12.6INCH
MAX AIR VOLUME	180	447	634 CFM
ATTACHED CORD (18G)	6 FT	6 FT	6 FT

MODEL: KP-280/230V & KP-680/230V

115 VOLT	KP280/230V	KP680/230V
MOTOR POWER	280W	680W
AMPS	1A	2.3A
MAX STATIC PRESSURE	5	7.5
WEIGHT NET	8 LBS	18 LBS
UNIT SIZE (LxWxH)	14.2x14.2x11	17.4x17.4x12.6 INCH
MAX AIR VOLUME	180	569 CFM
ATTACHED CORD (18G)	6 FT	6 FT

TROUBLESHOOTING

<u>PROBLEM</u>	<u>POSSIBLE CAUSE</u>	<u>SOLUTION</u>
Motor Not Running	a) Switch is OFF	a) Turn Switch ON
	b) Bad Outlet	b) Check Outlet/ Change to Another Outlet
	c) Faulty Switch/Cord	c) Call Factory for new Switch/Replace Cord
Scraping Noise From Blower	a) Wheel Out Of Line	a) Call Factory for Replacement Advise
Weak Air Flow	a) Obstructed Vents/Inlets	a) Clean Out Vents/Inlets

